 
 


INSTALLATION MANUAL

INSTALLATION (CAUTION: BEFORE BEGINNING INSTALLATION TURN OFF CIRCUIT BREAKER AND LIGHT SWITCH)

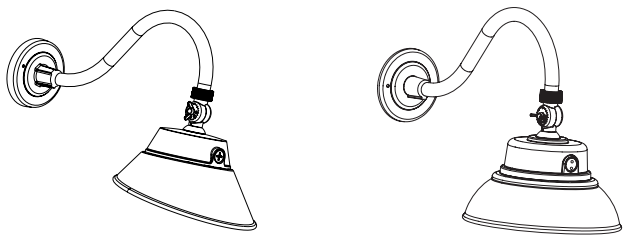

HARDWARE INCLUDED (Some parts may be pre-assembled)

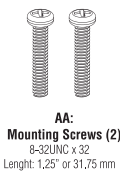

AA:
Mounting Screws (2)
8-32UNC x 32
Length: 1.25" or 31.75 mm



BB:
Mounting Screws (2)
8-32UNC x 32
Length: 3/8" or 9.525 mm



CC:
Wire Nuts (3)



DD:
Screw Caps (2)
(Customization)



EE:
Mounting Bracket (1)
(Customization)

PRE - INSTALLATION

- CAREFULLY REMOVE THE FIXTURE FROM THE CARTON
- BEFORE BEGINNING ASSEMBLY, INSTALLATION OR OPERATION OF PRODUCT, MAKE SURE ALL PARTS ARE PRESENT. COMPARE PARTS WITH PACKAGE CONTENTS LIST AND DIAGRAM ON PREVIOUS PAGE. IF ANY PARTS ARE MISSING OR DAMAGED, DO NOT ATTEMPT TO ASSEMBLE, INSTALL OR OPERATE THIS PRODUCT. CONTACT CUSTOMER SERVICE FOR REPLACEMENT PARTS.
- TOOLS REQUIRED FOR ASSEMBLY (NOT INCLUDED): SCREWDRIVER, PHILLIPS SCREWDRIVER, PLIERS, ELECTRICAL TAPE, WIRE CUTTERS, SAFETY GLASSES, LADDER, WIRE STRIPPERS

SAFETY INFORMATION

BE SURE THE POWER IS OFF! We highly recommend that all installations are made by a Licensed Electrical Contractor. We are NOT responsible by any means for the use or misuse of the following information. We are NOT responsible in whole or in part for any harm or damage that may or may not be caused. We reserve the right to revise the components of any product, due to parts availability or change in ETL, CUL or UL standards without assuming any obligation or liability to modify any products previously manufactured and without notice. These instructions do not cover all details of variations in equipment, nor do they provide of every possible contingency to be met in. Turn off/ unplug power to installing or servicing this fixture. Do not operate if cover shields are damaged. Do not adjust fixture angle exceed 360° through swivel. After installation, the edge of wall canopy should be properly sealed with glue to protect fixture's wiring from potential water or others.

WARNING

WARNING: Read all safety precautions and installation instructions carefully before installing or servicing this fixture. Failure to comply with these instructions could result in a potentially fatal electric shock and/or property damage.

- To reduce the risk of electrical shock or other personal injury, ensure the power is turned OFF at the fuse or breaker box before making any electrical connections.
- For outdoor use only .
- Multi-volt (100~277 volt (default)) or 120V (optional) for commercial or residential use.
- Fixture should be mounted to a grounded junction box marked for use in wet locations.
- Suitable for wall mount.
- NOT suitable for ground locations. Minimum of 4 feet or higher.
- Utility Light should be installed by a qualified electrician or person experienced with household wiring. The electrical system, and method of electrical connection of the fixture, must be in accordance with the National Electrical Code and local building codes.

SUITABLE FOR WET LOCATIONS
CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
MINIMUM 90°C SUPPLY CONDUCTORS
THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

FCC WARNING

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

NOTES: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

INSTALLATION (CAUTION: BEFORE BEGINNING INSTALLATION TURN OFF CIRCUIT BREAKER AND LIGHT SWITCH)

PRE-ASSEMBLE FIXTURE


Connect **Arm (C)** and **Lamp (A)** through **Swivel (D)** and rotate Swivel to fasten two parts. Be careful not to misplace any of the hardware needed for installing the fixture.

NOTE: Tighten **Swivel (D)** until tight. Do not over tighten.

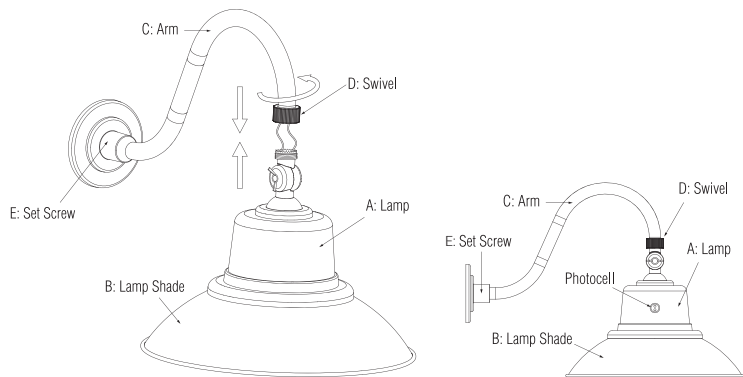

WATTAGE AND CCT ADJUSTMENT

 1. Place a flat edge under the white protective cap, an pry off.
2. Adjust slide switches to adjust wattage and CCT to desired settings.

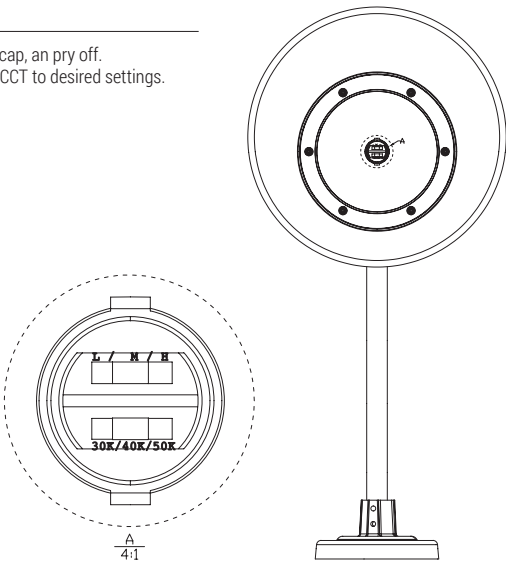

INSTALLATION MANUAL

INSTALLATION (CAUTION: BEFORE BEGINNING INSTALLATION TURN OFF CIRCUIT BREAKER AND LIGHT SWITCH)

IMPORTANT: DO NOT USE THIS FIXTURE WITH DIMMERS OR TIMERS

 
- This fixture is suitable for wall mount only. It is not suitable for ground mount installation.
- For best performance, mount the fixture 2.4-3.6 m / 8-12 ft above the ground.

PULL THE WIRE OUT FROM JUNCTION BOX

Pull the supply wire (Line, Neutral and Ground) out from the JUNCTION BOX through the large center hole in the MOUNTING BRACKET (EE). (Figure 1)

ATTACH MOUNTING BRACKET

Attach MOUNTING BRACKET (EE) to the Junction BOX using the MOUNTING SCREWS (AA). (Figure 2)

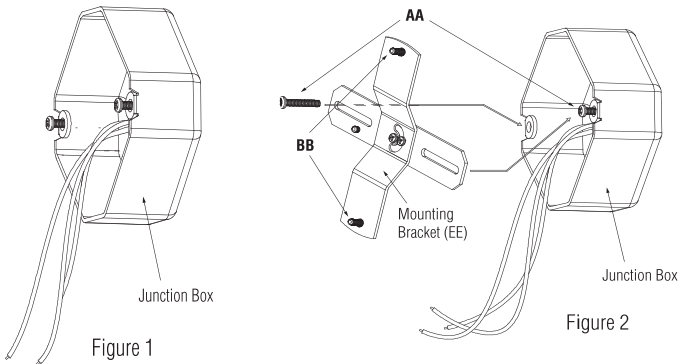

ATTATCH POWER SUPPLY WIRE

1. Connect the fixture ground wire (GREEN) to the ground supply wire using a wire nut (CC).
2. Connect the BLACK fixture wire to the BLACK (Line) supply wire using the wire nuts (CC).
3. Connect the WHITE fixture wire to the WHITE (Neutral) supply wire using the wire nuts (CC).
4. Carefully tuck all wiring back into the JUNCTION BOX, making sure there are no exposed un-insulated wires. (Figure 3)

 
NOTE: For proper connection, place the wire nuts over the wires and twist clockwise until tight. RECOMMENDED: Wrap with each wire nut with electrical tape (not included).

ATTATCH WALL CANOPY

Place the WALL CANOPY over the JUNCTION BOX and onto the fixture's MOUNTING SCREWS (BB) and adjust the fixture MOUNTING SCREWS (BB) until they protrude out an appropriate height from the back of the WALL CANOPY to allow the SCREW CAPS (DD) to hold the WALL CANOPY tightly against the wall. Remove the WALL CANOPY and secure the position of the MOUNTING SCREWS (BB) against the MOUNTING BRACKET (EE). (Figure 3)

NOTE: Tighten Set Screw once Arm is fixed into place.


RECOMMENDED: Apply silicon caulk around edge of wall canopy to weatherproof.

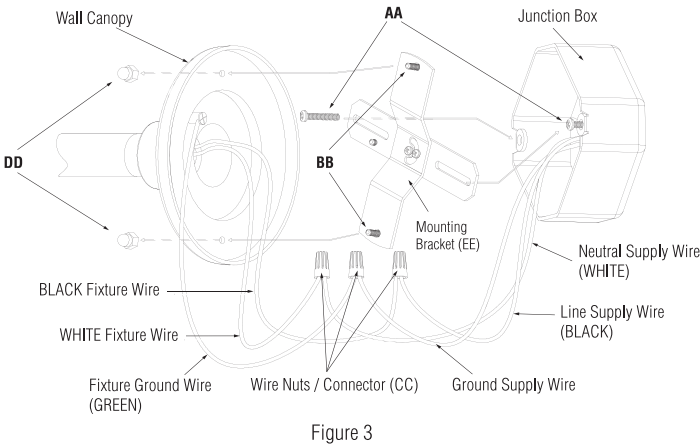

ADJUST FIXTURE ANGLE

Following the arrow illustration to rotate swivel and butterfly bolt to adjust fixture angle which you want.

 NOTE: Loosen Butterfly Bolt to adjust Lamp Shade and tighten when desired position is reached.

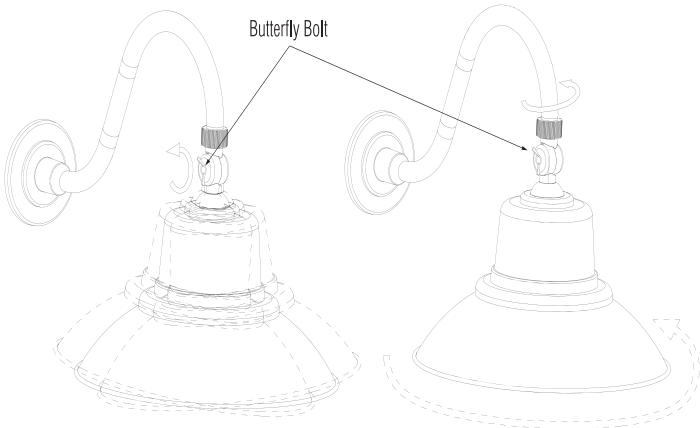

TROUBLE SHOOTING

PROBLEM	POSSIBLE CARE	SOULTION
Light will not come on	A. Light switch is turned off	A. Turn light switch on
	B. Fuse is blown or circuit breaker is turned off	B. Replace fuse or turn circuit breaker on.
	C. Incorrect wiring	C. Verify that fixture is wired properly

CARE AND MAINTENANCE

CAUTION: Before attempting to clean he fixture, disconnect the power to the fixture by turning the breaker off or removing the fuse from the fuse box. This LED light fixture is made from quality materials that will last many years with minimum care and maintenance. You may want to clean the fixture with a soft cloth periodically. To maintain the best appearance of the fixture, do ot use cleaners with chemicals, solvents or harsh abrasives. Do not use liquid cleaners on the LEDs, LED driver or wiring inside the fixture.